210mm

297mm

SYLVANIA

SMP1015

Quick Start Guide

www.curtisint.com

1. Overview

Front and Back

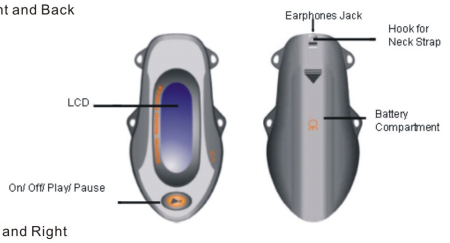

Left and Right

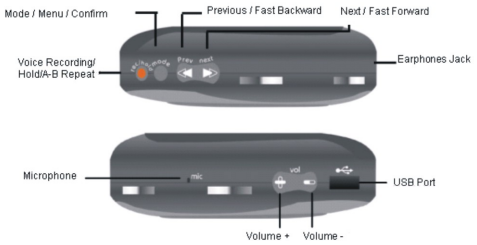

2. Navigation

2.1 After entering Main Menu page, select Navigation and press MODE/ CONFIRM button to enter Multi-level folder management mode.
2.2 The display will enter to Root folder. Press NEXT/ PREV button to select your desired folder.
2.3 Press the MODE button to enter sub-folder.
2.4 After entering the folder, press NEXT/ PREV button to select your desired song.
2.5 Press PLAY button to play the songs.
2.6 Press REC/HOLD button to return to previous folder.

3. Play Music

3.1 After entering Main Menu page, select Play Music and press MODE/ CONFIRM button to enter Playing Song mode.
3.2 The display will return to the following screen in STOP mode.
3.3 Press PREV/ NEXT button to select your desired song.
3.4 Press PLAY button to start playing selected MP3 or WMA music. If there is no MP3 and WMA files, "No Music Files" will show on the display.
3.4.1 Press PREV/NEXT button and release it immediately to jump to next or previous song.
3.4.2 Press PREV/NEXT button and hold it to fast forward or backward.

4. Play Voice

4.1 After entering Main Menu page, select Play Voice and press MODE/CONFIRM button to enter Playing Recorded Voice mode.
4.2 The display will return to the following screen in STOP mode.
4.3 Press PREV/ NEXT button to select your desired voice.
4.4 Press PLAY button to start playing selected audio files. If there is no recorded audio file, "No VOC File" will show on the display.
4.4.1 Press PREV/NEXT button and release it immediately to jump to next or previous recorded voice.
4.4.2 Press PREV/NEXT button and hold it to fast forward or backward.

5. Setting

5.1 After entering Main Menu page, press PREV/NEXT to select Setting Function.
5.2 Press MODE/CONFIRM button to enter Sys Function menu page.
5.3 EQ Set
5.3.1 In Setting menu, press MODE/CONFIRM button to select EQ Set to enter the EQ mode. Seven EQ modes are available: Normal, Rock, Jazz, Bass, Pop, Classical and Soft.
5.3.2 Press PREV/NEXT button to change the desired EQ mode and press MODE/CONFIRM button to confirm the EQ mode.
5.3.3 The setting of EQ mode is able to apply in Playing Song and Playing Recorded Voice mode.
5.4 PlayMode
5.4.1 In PlayMode Menu, press PREV/NEXT button to select the desired Repeat mode. Seven Repeat Modes are available: Normal, Repeat One, Repeat All, Random, Random All, Preview.
5.5 Contrast
5.5.1 After entering Setting menu, select Contrast by press PREV/NEXT to increase or decrease the contrast of the display.
5.5.2 Press MODE/CONFIRM button to confirm the desired contrast rate.
5.6 Backlight
5.6.1 After entering Setting menu, select Backlight by press PREV/NEXT button to set the backlight duration. The backlight duration can be set in the range of 0 to 45 seconds.
5.6.2 Press MODE/CONFIRM button to confirm the desired backlight duration.
5.7 Backlight Color
5.7.1 After entering Setting menu, select Backlight Color. The backlight color can be set in seven colors.
5.7.2 Press PREV/NEXT button to select your desired color, or select Auto that the backlight color will be changed in sequence once any button is pressed.
5.8 Power Save
5.8.1 After entering Setting menu, select Power Save by pressing MODE/ CONFIRM button to enter this menu. The Off Time can be set in the sequence of DISABLE, 2MINS, 10MINS, 30MINS.
5.9 Recordset
5.9.1 After entering Setting menu, select Recordset by pressing MODE/ CONFIRM button to enter this menu.
5.9.2 Press the PREVIOUS/NEXT button to select items including Source, Encoder, Sample and Exit.
5.9.3 Source: Only MIC mode is available in Source.
5.9.4 Encoder: Press MODE/CONFIRM button to select the different Encoder including IMADPCM, MSADPCM and ADPCM.
5.9.5 Sample: Press MODE/CONFIRM button to select the different data including 8000Hz, 11025Hz, 16000Hz, 22050Hz, 32000Hz, 44100Hz and 48000Hz.
5.9.6 Exit: Press MODE/CONFIRM button to select this item to get back to the Setting Menu.
5.10 Language
5.10.1 After entering Sys Function menu page, press PREVIOUS/NEXT to select Language Function.
5.11 Exit
5.11.1 Press this Exit item to get back to the Setting mode.

6. Record

6.1 After entering Main Menu page, select Record and press MODE/CONFIRM button to enter Recording Voice mode.
6.2 The following display will be shown once you've entered Record Voice mode and start record.
6.3 Put the sound source near the built-in microphone. You are allowed to press PAUSE/PLAY button to pause or continue the recording.
6.4 When you finished the recording, press MODE/CONFRIM button and get back to the STOP mode. The recorded audio files will be automatically saved under Root Directory as default. You can check the recorded audio files by pressing PREV/NEXT button.

7. Delete

7.1 After entering Main Menu page, select "Delete" and press MODE/CONFIRM button to enter Delete function.
7.2 Press PREVIOUS/ NEXT button to select the Voice files that you want to delete.
7.3 Press Volumn + /Volumn to select "Yes" or "No". If you selected "Yes", "file deleted" will show on the display. You can press REC/HOLD button to get back to the Sub-menu.

8. About

8.1 After entering Setting menu page, select About item by pressing MODE/ CONFIRM button. The MEM Info and the version of the firmware will be shown on the display for reference.

9. Exit

9.1 Press this Exit item to get back to the STOP Mode.